

Hardware Documentation

Data Sheet

HAL[®] 880

Programmable Linear Hall-Effect Sensor

Copyright, Warranty, and Limitation of Liability

The information and data contained in this document are believed to be accurate and reliable. The software and proprietary information contained therein may be protected by copyright, patent, trademark and/or other intellectual property rights of Micronas. All rights not expressly granted remain reserved by Micronas.

Micronas assumes no liability for errors and gives no warranty representation or guarantee regarding the suitability of its products for any particular purpose due to these specifications.

By this publication, Micronas does not assume responsibility for patent infringements or other rights of third parties which may result from its use. Commercial conditions, product availability and delivery are exclusively subject to the respective order confirmation.

Any information and data which may be provided in the document can and do vary in different applications, and actual performance may vary over time.

All operating parameters must be validated for each customer application by customers' technical experts. Any new issue of this document invalidates previous issues. Micronas reserves the right to review this document and to make changes to the document's content at any time without obligation to notify any person or entity of such revision or changes. For further advice please contact us directly.

Do not use our products in life-supporting systems, military, aviation, or aerospace applications! Unless explicitly agreed to otherwise in writing between the parties, Micronas' products are not designed, intended or authorized for use as components in systems intended for surgical implants into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the product could create a situation where personal injury or death could occur.

No part of this publication may be reproduced, photocopied, stored on a retrieval system or transmitted without the express written consent of Micronas.

Micronas Trademarks

HAL

Micronas Patents

EP 0 953 848, EP 0 647 970, EP 1 039 357, EP 1 575 013, EP 1 949 034

Third-Party Trademarks

All other brand and product names or company names may be trademarks of their respective companies.

Contents

Page	Section	Title	
4	1.	Introduction	
4	1.1.	Major Applications	
4	1.2.	Features	
5	2.	Ordering Information	
5	2.1.	Device-Specific Ordering Codes	
6	3.	Functional Description	
6	3.1.	General Function	
8	3.2.	Digital Signal Processing and EEPROM	
11	3.3.	Calibration Procedure	
11	3.3.1.	General Procedure	
13	4.	Specifications	
13	4.1.	Outline Dimensions	
18	4.2.	Soldering, Welding and Assembly	
18	4.3.	Pin Connections and Short Descriptions	
18	4.3.1.	TO92UT Package	
18	4.3.2.	SOIC8 Package	
18	4.4.	Dimensions of Sensitive Area	
18	4.5.	Package Parameters and Positions of Sensitive Areas	
19	4.6.	Absolute Maximum Ratings	
20	4.7.	Storage and Shelf Life	
20	4.8.	Recommended Operating Conditions	
21	4.9.	Characteristics	
23	4.9.1.	Definition of Sensitivity Error ES	
24	4.10.	Open-Circuit Detection	
24	4.11.	Power-On Operation	
24	4.12.	Overvoltage and Undervoltage Detection	
25	5.	Application Notes	
25	5.1.	Application Circuit	
25	5.2.	Use of two HAL880 in Parallel	
26	5.3.	Temperature Compensation	
27	5.4.	Ambient Temperature	
27	5.5.	EMC and ESD	
28	6.	Programming of the Sensor	
28	6.1.	Definition of Programming Pulses	
28	6.2.	Definition of the Telegram	
31	6.3.	Telegram Codes	
32	6.4.	Number Formats	
32	6.5.	Register Information	
35	6.6.	Programming Information	
36	7.	Data Sheet History	

Programmable Linear Hall-Effect Sensor

Release Note: Revision bars indicate significant changes to the previous edition.

1. Introduction

The HAL880 is a member of the Micronas family of programmable linear Hall sensors. The HAL880 complements the existing Hall-effect sensor family HAL8xy to the lower end. It is designed to fulfill the requirements of today's state-of-the-art applications for linear and angular measurements that require programmability to compensate system tolerances.

The HAL880 is an universal magnetic field sensor with a linear output based on the Hall effect. The IC can be used for angle or distance measurements if combined with a rotating or moving magnet. The major characteristics like magnetic field range, sensitivity, output quiescent voltage (output voltage at B = 0 mT), and output voltage range are programmable in a non-volatile memory. The sensor has a ratiometric output characteristic, which means that the output voltage is proportional to the magnetic flux and the supply voltage.

The HAL880 features a temperature-compensated Hall plate with choppered offset compensation, an A/D converter, digital signal processing, a D/A converter with output driver, an EEPROM memory with redundancy and lock function for the calibration data, an EEPROM for customer serial number, a serial interface for programming the EEPROM, and protection devices at all pins. The internal digital signal processing is of great benefit because analog offsets, temperature shifts, and mechanical stress do not degrade the sensor accuracy.

The HAL880 is programmable by modulating the supply voltage. No additional programming pin is needed. The easy programmability allows a 2-point calibration by adjusting the output voltage directly to the input signal (like mechanical angle, distance, or current). Individual adjustment of each sensor during the customer's manufacturing process is possible. With this calibration procedure, the tolerances of the sensor, the magnet, and the mechanical positioning can be compensated in the final assembly. This offers a low-cost alternative for all applications that presently need mechanical adjustment or laser trimming for calibrating the system.

In addition, the temperature compensation of the Hall IC can be fit to common magnetic materials by programming first and second order temperature coefficients of the Hall sensor sensitivity.

The calculation of the individual sensor characteristics and the programming of the EEPROM memory can easily be done with a PC and the application kit from Micronas.

The sensor is designed for hostile industrial and automotive applications and operates with typically 5 V supply voltage in the ambient temperature range from -40 °C up to 125 °C. The HAL 880 is available in the very small leaded packages TO92UT-1, TO92UT-2 and in the eight-pin SOIC8 SMD package.

1.1. Major Applications

Due to the sensor's versatile programming characteristics and low temperature drifts, the HAL880 is the optimal system solution for applications such as:

- contactless potentiometer,
- rotary position measurement,
- linear movement,
- current measurements.

1.2. Features

- programmable linear Hall effect sensor with ratiometric output and digital signal processing
- 12-bit analog output
- multiple programmable magnetic characteristics in a non-volatile memory (EEPROM) with redundancy and lock function
- open-circuit (ground and supply line break detection) with 10 kΩ pull-up and pull-down resistor, overvoltage and undervoltage detection
- for programming an individual sensor within several sensors in parallel to the same supply voltage, a selection can be done via the output pin
- temperature characteristics are programmable for matching common magnetic materials
- programmable clamping function
- programming through a modulation of the supply voltage
- operates from –40 °C up to 140 °C junction temperature
- operates from 4.5 V up to 5.5 V supply voltage in specification and functions up to 8.5 V
- operates with static magnetic fields and dynamic magnetic fields up to 1 kHz
- overvoltage and reverse-voltage protection at all pins
- magnetic characteristics extremely robust against mechanical stress
- short-circuit protected push-pull output
- EMC and ESD optimized design

2. Ordering Information

A Micronas device is available in a variety of delivery forms. They are distinguished by a specific ordering code:

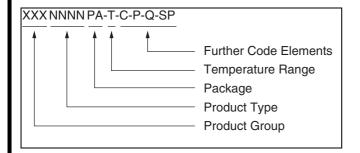


Fig. 2-1: Ordering Code Principle

For a detailed information, please refer to the brochure: "Sensors and Controllers: Ordering Codes, Packaging, Handling".

2.1. Device-Specific Ordering Codes

HAL880 is available in the following package and temperature variants.

Table 2-1: Available packages

Package Code (PA)	Package Type
UT	TO92UT-1/-2
DJ	SOIC8

Table 2–2: Available temperature range

Temperature Code (T)	Temperature Range
К	$T_{J} = -40 ^{\circ}\text{C to } +140 ^{\circ}\text{C}$

The relationship between ambient temperature (T_A) and junction temperature (T_J) is explained in Section 5.4. on page 29.

For available variants for Configuration (C), Packaging (P), Quantity (Q), and Special Procedure (SP) please contact Micronas.

Table 2–3: Available ordering codes and corresponding package marking

Available Ordering Codes	Package Marking
HAL880UT-K-[C-P-Q-SP]	880K
HAL880DJ-K-[C-P-Q-SP]	880K

3. Functional Description

3.1. General Function

The HAL880 is a monolithic integrated circuit which provides an output voltage proportional to the magnetic flux through the Hall plate and proportional to the supply voltage (ratiometric behavior).

The external magnetic field component perpendicular to the branded side of the package generates a Hall voltage. The Hall IC is sensitive to magnetic north and south polarity. This voltage is converted to a digital value, processed in the Digital Signal processing Unit (DSP) according to the settings of the EEPROM registers, converted to an analog voltage with ratiometric behavior, and stabilized by a push-pull output transistor stage. The function and the parameters for the DSP are explained in Section 3.2. on page 8.

The setting of the LOCK register disables the programming of the EEPROM memory for all time. This register cannot be reset.

As long as the LOCK register is not set, the output characteristic can be adjusted by programming the EEPROM registers. The IC is addressed by modulating the supply voltage (see Fig. 3–1). In the supply voltage range from 4.5 V up to 5.5 V, the sensor generates an analog output voltage. After detecting a command, the sensor reads or writes the memory and answers with a digital signal on the output pin.

The analog output is switched off during the communication. Several sensors in parallel to the same supply and ground line can be programmed individually. The selection of each sensor is done via its output pin.

The open-circuit detection provides a defined output voltage if the V_{SUP} or GND line is broken. Internal temperature compensation circuitry and the choppered offset compensation enables operation over the full temperature range with minimal changes in accuracy and high offset stability. The circuitry also rejects offset shifts due to mechanical stress from the package. The non-volatile memory consists of redundant and non-redundant EEPROM cells. The non-redundant EEPROM cells are only used to store production information inside the sensor. In addition, the sensor IC is equipped with devices for overvoltage and reverse-voltage protection at all pins.

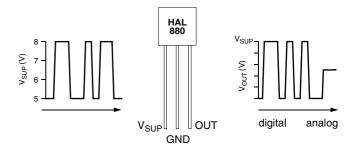


Fig. 3–1: Programming with V_{SUP} modulation

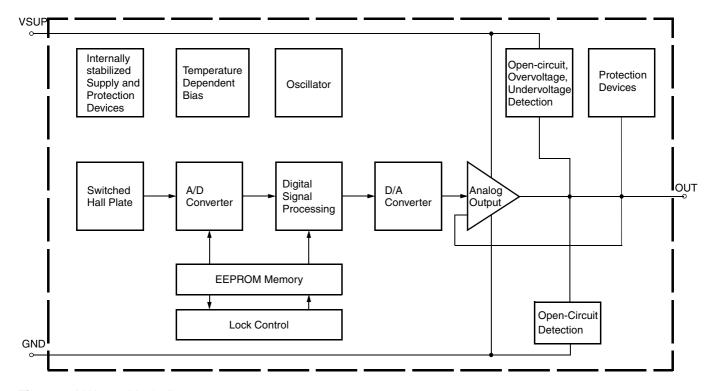


Fig. 3-2: HAL880 block diagram

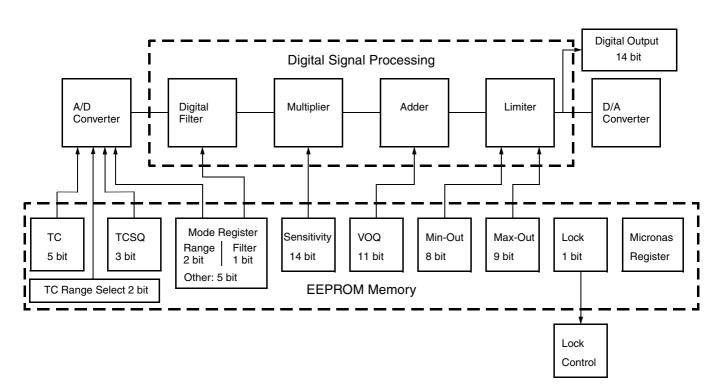


Fig. 3-3: Details of EEPROM and digital signal processing

3.2. Digital Signal Processing and EEPROM

The DSP is the main part of this sensor and performs the signal conditioning. The parameters for the DSP are stored in the EEPROM registers. The details are shown in Fig. 3–3 on page 7.

Terminology:

SENSITIVITY: name of the register or register value

Sensitivity: name of the parameter

The EEPROM registers consist of four groups:

Group 1 contains the registers for the adaption of the sensor to the magnetic system: MODE for selecting the magnetic field range and filter frequency, TC, TCSQ and TC-range for the temperature characteristics of the magnetic sensitivity.

Group 2 contains the registers for defining the output characteristics: SENSITIVITY, VOQ, CLAMP-LOW, and CLAMP-HIGH. The output characteristic of the sensor is defined by these 4 parameters.

- The parameter V_{OQ} (Output Quiescent Voltage) corresponds to the output voltage at B = 0 mT.
- The parameter Sensitivity defines the magnetic sensitivity:

$$Sensitivity = \frac{\Delta V_{OUT}}{\Delta B}$$

- The output voltage can be calculated as:

$$V_{OUT} \sim Sensitivity \times B + V_{OO}$$

The output voltage range can be clamped by setting the registers CLAMP-LOW and CLAMP-HIGH in order to enable failure detection (such as short-circuits to V_{SUP} or GND and open connections).

Group 3 contains the general purpose register GP. The GP register can be used to store customer information, like a serial number after manufacturing. Micronas will use this GP REGISTER to store information such as lot number, wafer number, x and y position of the die on the wafer, etc. This information can be readout by the customer and stored in its own data base or it can stay in the sensor as it is.

Group 4 contains the Micronas registers and LOCK for the locking of all registers. The Micronas registers are programmed and locked during production. These registers are used for oscillator frequency trimming, A/

D converter offset compensation, and several other special settings.

An external magnetic field generates a Hall voltage on the Hall plate. The ADC converts the amplified positive or negative Hall voltage (operates with magnetic north and south poles at the branded side of the package) to a digital value. The digital signal is filtered in the internal low-pass filter and manipulated according to the settings stored in the EEPROM. The digital value after signal processing is readable in the D/A-READOUT register. Depending on the programmable magnetic range of the Hall IC, the operating range of the A/D converter is from -30 mT ... +30 mT up to -100 mT ... +100 mT.

During further processing, the digital signal is multiplied with the sensitivity factor, added to the quiescent output voltage and limited according to the clamping voltage. The result is converted to an analog signal and stabilized by a push-pull output transistor stage.

The D/A-READOUT at any given magnetic field depends on the programmed magnetic field range, the low-pass filter, TC values, CLAMP-LOW and CLAMP-HIGH. The D/A-READOUT range is min. 0 and max. 16383.

Note: During application design, it should be taken into consideration that the maximum and minimum D/A-READOUT should not saturate in the operational range of the specific application.

Range

The RANGE bits are bit 2 and 3 of the MODE register; they define the magnetic field range of the A/D converter.

Magnetic Field Range	RANGE
-30mT30 mT	0
-60 mT60 mT	1
-80 mT80 mT	2
-100 mT100 mT	3

Filter

The FILTER bit is bit number 4 of the MODE register; it defines the -3 dB frequency of the digital low pass filter.

-3 dB Frequency	FILTER
500 Hz	0
1 kHz	1

Bit Time

The BITTIME bit is bit number 5 of the MODE register; It defines the protocol bit time for the communication between the sensor and the programmer board.

Bit Time	BITTIME
1:64 (Typ. 1.75 ms)	0
1:128 (Typ. 3.5 ms)	1

Output Format

The OUTPUTMODE bits are the bits numbers 6 to 7 of the MODE register.

Output Format	OUTPUTMODE
Analog Output (12 bit)	0

TC Register

The temperature dependence of the magnetic sensitivity can be adapted to different magnetic materials in order to compensate for the change of the magnetic strength with temperature. The adaption is done by programming the TC (Temperature Coefficient) and the TCSQ registers (Quadratic Temperature Coefficient). Thereby, the slope and the curvature of the temperature dependence of the magnetic sensitivity can be matched to the magnet and the sensor assembly. As a result, the output voltage characteristic can be fixed over the full temperature range. The sensor can compensate for linear temperature coefficients ranging from about -3100 ppm/K up to 1000 ppm/K and quadratic coefficients from about -7 ppm/K2 to 2 ppm/K2. The full TC range is separated in the following four ranges:

TC-Range [ppm/k]	GROUP
−3100 to −1800	0
−1750 to −550	2
-500 to +450 (default value)	1
+450 to +1000	3

TC (5 bit) and TCSQ (3 bit) have to be selected individually within each of the four ranges. For example: 0 ppm/k requires TC-Range = 1, TC = 15 and TCSQ = 1.

Sensitivity

The SENSITIVITY register contains the parameter for the multiplier in the DSP. The Sensitivity is programmable between -4 and 4. For $V_{SUP}=5$ V, the register can be changed in steps of 0.00049.

For all calculations, the digital value from the magnetic field of the D/A converter is used. This digital information is readable from the D/A-READOUT register.

$$SENSITIVITY = \frac{\Delta V_{out} \times 16384}{2 \times \Delta DA\text{-}Readout \times V_{SUP}}$$

VOQ

The VOQ register contains the parameter for the adder in the DSP. V_{OQ} is the output voltage without external magnetic field (B = 0 mT) and programmable from $-V_{SUP}$ up to V_{SUP} For V_{SUP} = 5 V, the register can be changed in steps of 4.9 mV.

Note: If V_{OQ} is programmed to a negative voltage, the maximum output voltage is limited to:

$$V_{OUTmax} = V_{OQ} + V_{SUP}$$

Clamping Voltage

The output voltage range can be clamped in order to detect failures like short circuits to V_{SUP} or GND or an open circuit.

The CLAMP-LOW register contains the parameter for the lower limit. The lower clamping voltage is programmable between 0 V and $V_{SUP}/2$. For $V_{SUP}=5$ V, the register can be changed in steps of 9.77 mV.

The CLAMP-HIGH register contains the parameter for the upper limit. The upper clamping voltage is programmable between 0 V and V_{SUP} For $V_{SUP} = 5$ V, in steps of 9.77 mV.

GP Register

This register can be used to store some information, such as production date or customer serial number. Micronas will store production lot number, wafer number, and x, y coordinates in three blocks of this registers. The total register contains of four blocks with a length of 13 bit each. The customer can read out this information and store it in his production data base for reference or he can store own production information.

Note: To enable programming of the GP register, bit 0 of the MODE register has to be set to 1. This register is not a guarantee for traceability.

LOCKR

By setting the first bit of this 2-bit register, all registers will be locked and the sensor will no longer respond to any supply voltage modulation. This bit is active after the first power-off and power-on sequence after setting the LOCK bit.

Warning: This register cannot be reset!

D/A-Readout

The 14-bit D/A-READOUT register delivers the actual digital value of the applied magnetic field after the signal processing. This register can be read out and is the basis for the calibration procedure of the sensor in the system environment.

Note: The MSB and LSB are reversed compared with all the other registers. Please reverse this register after readout.

3.3. Calibration Procedure

3.3.1. General Procedure

For calibration in the system environment, the application kit from Micronas is recommended. It contains the hardware for the generation of the serial telegram for programming (Programmer Board Version 5.1) and the corresponding software (PC880) for the input of the register values.

For the individual calibration of each sensor in the customer application, a two-point adjustment is recommended. The calibration has be done as follows:

Step 1: Input of the registers which need not be adjusted individually

The magnetic circuit, the magnetic material with its temperature characteristics, the filter frequency, the output mode and the GP register value are given for this application. Therefore, the values of the following registers should be identical for all sensors of the customer application.

- FILTER (according to the maximum signal frequency)
- RANGE (according to the maximum magnetic field at the sensor position)
- OUTPUTMODE
- TC, TCSQ, and TC-RANGE (depends on the material of the magnet and the other temperature dependencies of the application)
- GP
 (if the customer wants to store own production information, it is not necessary to change this register)

The clamping voltages should be set after the adjustment process. This avoids clamping of the D/A-Readout value during calibration, because the D/A-Readout value is needed for the Sensitivity and Voq calculations during calibration.

Write the appropriate settings into the HAL880 registers.

Step 2: Initialize DSP

As the D/A-READOUT register value depends on the settings of SENSITIVITY, VOQ, and CLAMP-LOW/HIGH, these registers have first to be initialized with defined values:

- VOQ_{INITIAL} = 2.5 V
- Sensitivity_{INITIAI} = 0.5
- Clamp-Low = 0 V
- Clamp-High = 4.999 V

Step 3: Define Calibration Points

The calibration points 1 and 2 can be set inside the specified range. The corresponding values for V_{OUT1} and V_{OUT2} result from the application requirements.

$$Low clamping voltage \leq V_{OUT1,2} \leq High clamping voltage$$

For highest accuracy of the sensor, calibration points near the minimum and maximum input signal are recommended. The difference of the output voltage between calibration point 1 and calibration point 2 should be more than 3.5 V.

Step 4: Calculation of V_{OQ} and Sensitivity

Set the system to calibration point 1 and read the register D/A-READOUT. The result is the value D/A-READOUT1.

Now, set the system to calibration point 2, read the register D/A-READOUT again, and get the value D/A-READOUT2.

With these values, and the target values V_{OUT1} and V_{OUT2} , for the calibration points 1 and 2, respectively, the values for Sensitivity and V_{OO} are calculated as:

$$Sensitivity = \frac{1}{2} \times \frac{(Vout2 - Vout1)}{D/A - Readout2 - D/A - Readout1} \times \frac{16384}{5}$$

$$\begin{split} V_{OQ} &= \frac{1}{16} \times \left[\frac{Vout2 \times 16384}{5} - \right. \\ &\left[\left(D/A - Readout2 - 8192 \right) \times Sensitivity \times 2 \right] \right] \times \frac{5}{1024} \end{split}$$

This calculation has to be done individually for each sensor.

Next, write the calculated values for Sensitivity and V_{OQ} into the IC for adjusting the sensor. At that time, it is also possible to store the application specific values for Clamp-Low and Clamp-High into the sensors EEPROM.

The sensor is now calibrated for the customer application. However, the programming can be changed again and again if necessary.

Note: For a recalibration, the calibration procedure has to be started at the beginning (step 1). A new initialization is necessary, as the initial values from step 1 are overwritten in step 4.

Step 5: Locking the Sensor

The last step is activating the LOCK function by programming the LOCK bit. Please note that the LOCK function becomes effective after power-down and power-up of the Hall IC. The sensor is now locked and does not respond to any programming or reading commands.

Warning: This register can not be reset!

4. Specifications

4.1. Outline Dimensions

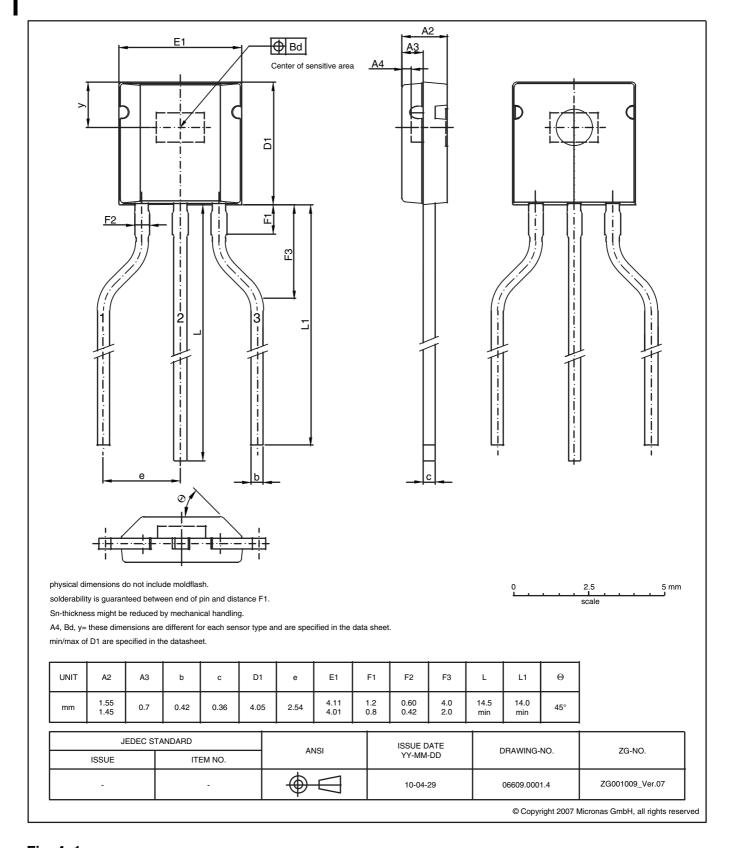


Fig. 4–1:■ TO92UT-1 Plastic Transistor Standard UT package, 3 leads, spread Weight approximately 0.12 g

13

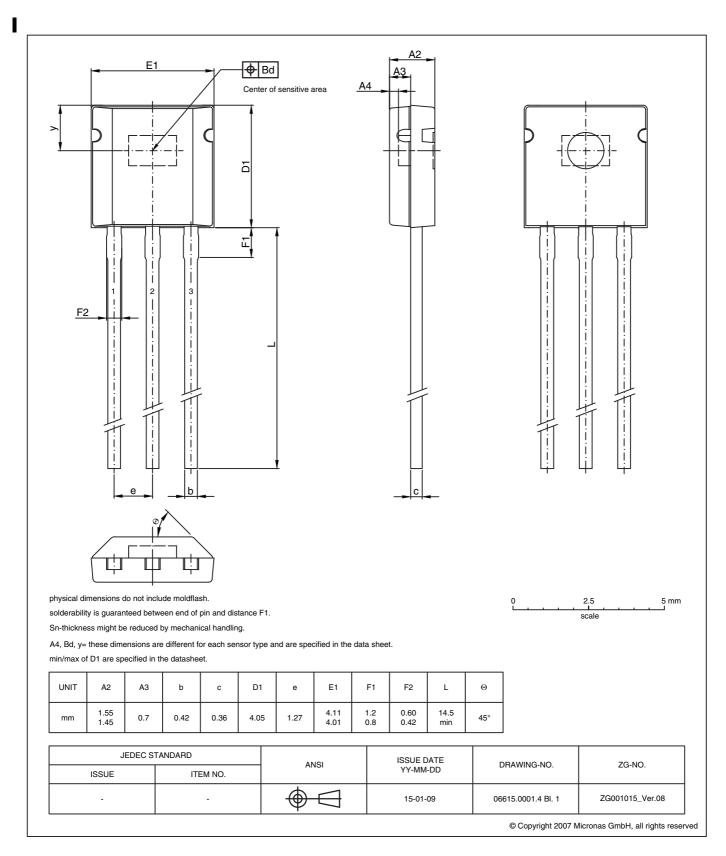


Fig. 4–2: ■ TO92UT-2 Plastic Transistor Standard UT package, 3 pins Weight approximately 0.12 g

DATA SHEET HAL880

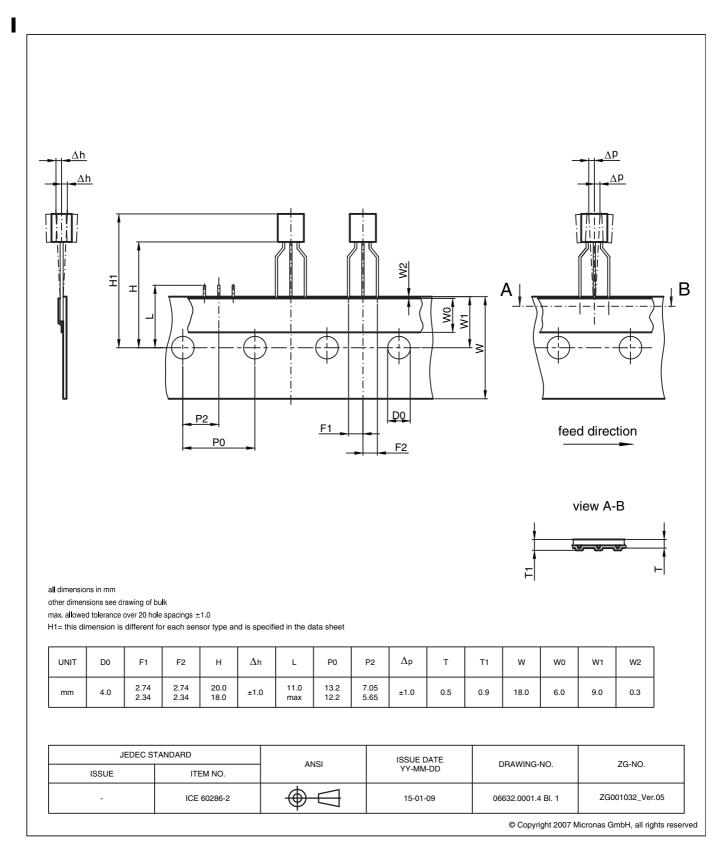


Fig. 4–3: TO92UA/UT: Dimensions ammopack inline, spread, standard lead length

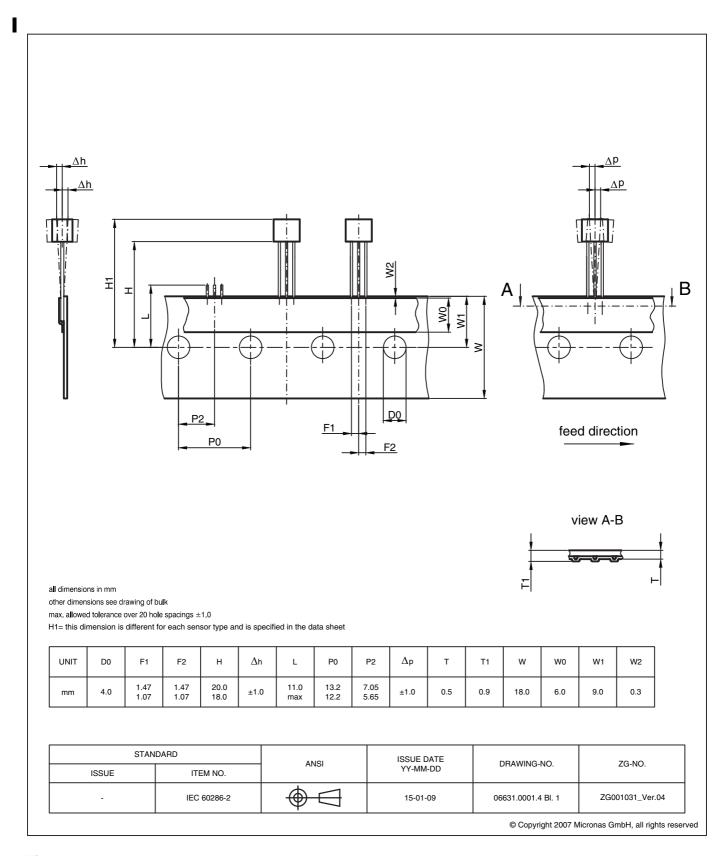


Fig. 4–4:
TO92UA/UT: Dimensions ammopack inline, not spread, standard lead length

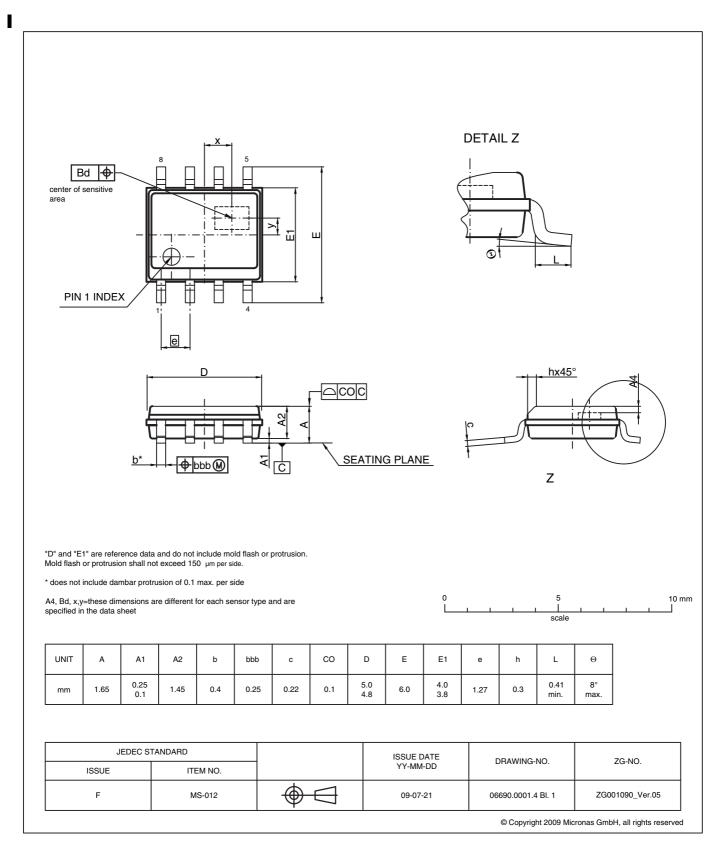


Fig. 4–5:
■ SOIC8-1: Plastic Small Outline IC package, 8 leads, gullwing bent, 150 mil Ordering code: DJ
Weight approximately 0.076 g

4.2. Soldering, Welding and Assembly

Information related to solderability, welding, assembly, and second-level packaging is included in the document "Guidelines for the Assembly of Micronas Packages".

It is available on the Micronas website (http://www.micronas.com/en/service-center/downloads) or on the service portal (http://service.micronas.com).

4.3. Pin Connections and Short Descriptions

4.3.1. TO92UT Package

Pin No.	Pin Name	Туре	Short Description
1	V _{SUP}	IN	Supply Voltage and Programming Pin
2	Gnd		Ground
3	OUT	OUT	Push-Pull Output and Selection Pin

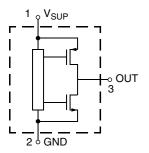


Fig. 4-6: Pin configuration TO92UT

4.3.2. SOIC8 Package

Pin No.	Pin Name	Туре	Short Description
1	V _{SUP}	In	Supply Voltage and Programming Pin
2,5,6,7,8	Gnd		Ground
3	NC		Not Connected
4	OUT	OUT	Push-Pull Output and Selection Pin

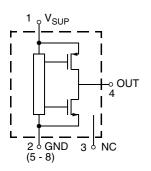


Fig. 4-7: Pin configuration SOIC8

Note: Pins number 2, 5, 6, 7, and 8 must be connected to GND.

4.4. Dimensions of Sensitive Area

0.25 mm x 0.25 mm

4.5. Package Parameters and Positions of Sensitive Areas

	TO92UT-1/-2	SOIC8
х	_	0 mm nominal
у	1.5 mm nominal	0.13 mm nominal
A4	0.3 mm nominal	0.38 mm nominal
Bd	0.3 mm	0.3 mm
D1	4.05 mm ± 0.05 mm	_
H1	min. 22.0 mm max. 24.1 mm	_

4.6. Absolute Maximum Ratings

Stresses beyond those listed in the "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only. Functional operation of the device at these conditions is not implied. Exposure to absolute maximum rating conditions for extended periods will affect device reliability.

This device contains circuitry to protect the inputs and outputs against damage due to high static voltages or electric fields; however, it is advised that normal precautions be taken to avoid application of any voltage higher than absolute maximum-rated voltages to this circuit.

All voltages listed are referenced to ground (GND).

Symbol	Parameter	Pin No.	Min.	Max.	Unit	Comment
V _{SUP}	Supply Voltage	1	-8.5	8.5	٧	t < 96 h ¹⁾
V _{SUP}	Supply Voltage	1	-16	16	٧	t < 1 h ¹⁾
-I _{DD}	Reverse Supply Current	1	_	50	mA	1)
V _{OUT}	Output Voltage	3 or 4	-5 ²⁾	8.5	٧	1)
			-5 ²⁾	16	٧	< 1 hr ¹⁾
V _{OUT} - V _{SUP}	Excess of Output Voltage over Supply Voltage	3 or 4,1	_	2	٧	
TJ	Junction Temperature	-	-40	140	°C	1)
l _{OUT}	Continuous Output Current	3 or 4	-10	10	mA	
t _{Sh}	Output Short Circuit Duration	3 or 4	_	10	min	

¹⁾ No cumulated stress

²⁾ internal protection resistor = 50 Ω

4.7. Storage and Shelf Life

Information related to storage conditions of Micronas sensors is included in the document "Guidelines for the Assembly of Micronas Packages". It gives recommendations linked to moisture sensitivity level and long-term storage.

It is available on the Micronas website (http://www.micronas.com/en/service-center/downloads) or on the service portal (http://service.micronas.com).

4.8. Recommended Operating Conditions

Functional operation of the device beyond those indicated in the "Recommended Operating Conditions/Characteristics" is not implied and may result in unpredictable behavior, reduce reliability and lifetime of the device.

All voltages listed are referenced to ground (GND).

Symbol	Parameter	Pin No.	Min.	Тур.	Max.	Unit	Remarks
V _{SUP}	Supply Voltage	1	4.5	5	5.5	V	
I _{OUT}	Continuous Output Current	3 or 4	-1.2	_	1.2	mA	
R _L	Load Resistor	3 or 4	5.0	10	_	kΩ	Can be pull-up or pull-down resistor
C _L	Load Capacitance	3 or 4	0.33	100	1000	nF	
N _{PRG}	Number of EEPROM Programming Cycles	-	_	-	100	cycles	0°C < T _{amb} < 55°C
T _J	Junction Temperature Range ¹⁾	_	-40 -40	-	125 150	°C	for 8000 h ²⁾ for 2000 h ²⁾

¹⁾ Depends on the temperature profile of the application. Please contact Micronas for life time calculations.

²⁾ Time values are not cumulative

4.9. Characteristics

at T_J = -40 °C to 140 °C, V_{SUP} = 4.5 V to 5.5 V, GND = 0 V after programming and locking, at Recommended Operating Conditions if not otherwise specified in the column "Conditions". Typical Characteristics for T_J = 25 °C and V_{SUP} = 5 V.

Symbol	Parameter	Pin No.	Min.	Тур.	Max.	Unit	Conditions
I _{DD}	Supply Current over Temperature Range	1	-	7	10	mA	
	Resolution	3 or 4	_	12	-	bit	ratiometric to V _{SUP} 1)
INL	Non-Linearity of Output Voltage over Temperature	3 or 4	-1	0	1	%	% of supply voltage ²⁾ For $V_{out} = 0.35 \text{ V} \dots 4.65 \text{ V};$ $V_{SUP} = 5 \text{ V}, \text{ Sensitivity } \le 0.95$
E _R	Ratiometric Error of Output over Temperature (Error in V_{OUT} / V_{SUP})	3 or 4	-1.0	0	1.0	%	$ V_{OUTI} - V_{OUT2} > 2 V$ during calibration procedure
ES	Error in Magnetic Sensitivity over Temperature Range	3 or 4	-6	0	6	%	(see Section 4.9.1. on page 23)
ΔV _{OUTCL}	Accuracy of Output Voltage at Clamping Low Voltage over Temperature Range	3 or 4	-30	0	30	mV	$R_L = 5 \text{ k}\Omega$, $V_{SUP} = 5 \text{ V}$
ΔV _{OUTCH}	Accuracy of Output Voltage at Clamping High Voltage over Temperature Range	3 or 4	-30	0	30	mV	$R_L = 5 \text{ k}\Omega$, $V_{SUP} = 5 \text{ V}$
V _{OUTH}	Upper Limit of Signal Band ³⁾	3 or 4	4.65	4.8	-	٧	$V_{SUP} = 5 \text{ V}, -1 \text{ mA} \le I_{OUT} \le 1 \text{mA}$
V _{OUTL}	Lower Limit of Signal Band ³⁾	3 or 4	_	0.2	0.35	٧	$V_{SUP} = 5 \text{ V}, -1 \text{ mA} \le I_{OUT} \le 1 \text{mA}$
f _{ADC}	Internal ADC Frequency over Temperature Range	_	-	128	-	kHz	
t _{r(O)}	Step Response Time of Output	3 or 4		1 0.5	2 1	ms ms	3 dB Filter frequency = 500 Hz 3 dB Filter frequency = 1 kHz C_L = 10 nF, time from 10% to 90% of final output voltage for a step like signal B_{step} from 0 mT to B_{max} (se)
t _{d(O)}	Delay Time of Output	3 or 4	_	0.1	0.5	ms	C _L = 10 nF
t _{POD}	Power-Up Time (Time to Reach Stabilized Output Voltage)	-	1.5	1.7	1.9	ms	C _L = 10 nF, 90% of V _{OUT}
BW	Small Signal Bandwidth (–3 dB)	3 or 4	-	1	-	kHz	B _{AC} < 10 mT; 3 dB Filter frequency = 1 kHz
V _{OUTn}	RMS Noise of Output Voltage	3 or 4	_	6	15	mV	$\begin{array}{l} \text{magnetic range} = 60 \text{ mT}^{4)} \\ \text{3 dB Filter frequency} = 500 \text{ Hz} \\ \text{Sensitivity} \leq 0.7; \text{C} = 100 \text{ nF (V}_{SUP} \\ \text{\& V}_{OUT} \text{ to GND)} \end{array}$
DAC _{GE}	D/A-Converter Glitch Energy	3 or 4	-	400	=	nVs	4)
R _{OUT}	Output Resistance over Recommended Operating Range	3 or 4	-	1	10	Ω	$V_{OUTLmax} \le V_{OUT} \le V_{OUTHmin}$

 $^{^{1)}}$ Output DAC full scale = 5 V ratiometric, Output DAC offset = 0 V, Output DAC LSB = $V_{SUP}/4096$

TO92UT Packages

if more than 50% of the selected magnetic field range is used (=> Sensitivity \leq 0.95) and the temperature compensation is suitable. INL = V_{OUT} - V_{OUTLSF} with V_{OUTLSF} = Least Square Fit Line voltage based on V_{OUT} measurements at a fixed temperature

³⁾ Signal Band Area with full accuracy is located between V_{OUTL} and V_{OUTH}. The sensor accuracy is reduced below V_{OUTL} and above V_{OUTH}

⁴⁾ The energy of the impulse injected into the analog output when the code in the D/A-Converter register changes state. This energy is normally specified as the area of the glitch in nVs.

Symbol	Parameter	Pin No.	Min.	Тур.	Max.	Unit	Conditions
	Thermal Resistance						
R _{thja}	Junction to Air	-	_	-	235	K/W	Measured with a 1s0p board
R_{thjc}	Junction to Case	_	_	-	61	K/W	Measured with a 1s0p board
R _{thjs}	Junction to Solder Point	_	_	_	128	K/W	Measured with a 1s1p board
SOIC8 Pa	ckage	•					
	Thermal Resistance						
R _{thja}	Junction to Air	-	_	_	142	K/W	Measured with a 1s0p board
·		_	_	_	88	K/W	Measured with a 1s1p board
R _{thjc}	Junction to Case	-	_	_	33	K/W	Measured with a 1s0p board
•		_	_	_	22	K/W	Measured with a 1s1p board

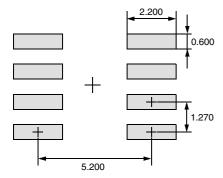


Fig. 4–8: Recommended pad size in mm for SOIC8 package

4.9.1. Definition of Sensitivity Error ES

ES is the maximum of the absolute value of the quotient of the normalized measured value¹⁾ over the normalized ideal linear²⁾ value minus 1:

$$ES = \max \left(abs \left(\frac{meas}{ideal} - 1 \right) \right) \bigg|_{[Tmin, Tmax]}$$

In the example below, the maximum error occurs at $-10~^{\circ}\text{C}$:

$$ES = \frac{1.001}{0.993} - 1 = 0.8\%$$

- 1) normalized to achieve a least-squares method straight line that has a value of 1 at 25 °C
- 2) normalized to achieve a value of 1 at 25 °C

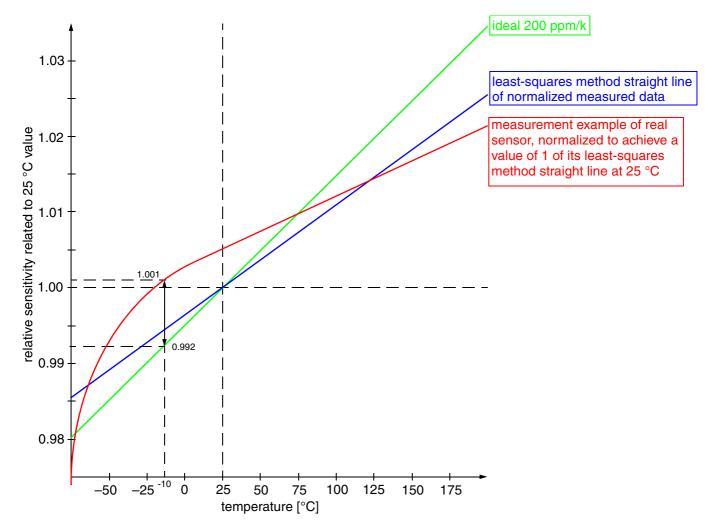


Fig. 4-9: ES definition example

4.10.Open-Circuit Detection

at $T_J = -40$ °C to +140 °C. Typical Characteristics for $T_J = 25$ °C, after locking the sensor

Symbol	Parameter	Pin No.	Min.	Тур.	Max.	Unit	Comment
V _{OUT}	Output Voltage at Open V _{SUP} Line	3 or 4	0	0	0.15	V	V_{SUP} = 5 V R_L = 10 k Ω to 200 k Ω
V _{OUT}	Output Voltage at Open GND Line	3 or 4	4.85	4.9	5.0	V	V_{SUP} = 5 V R_L = 10 k Ω to 200 k Ω
R _L : can be pull-up or pull-down resistor							

4.11.Power-On Operation

at T_J = -40 °C to +140 °C, after programming and locking. Typical Characteristics for T_J = 25 °C.

Symbol	Parameter	Min.	Тур.	Max.	Unit
POR _{UP}	Power-On Reset Voltage (UP)	-	3.4	_	V
POR _{DOWN}	Power-On Reset Voltage (DOWN)	-	3.0	_	V

4.12. Overvoltage and Undervoltage Detection

at $T_J = -40$ °C to +140 °C. Typical Characteristics for $T_J = 25$ °C, after programming and locking

Symbol	Symbol Parameter		Min.	Тур.	Max.	Unit	Conditions
V _{SUP,UV}	Undervoltage Detection Level	1	-	4.2	4.3	V	1)
V _{SUP,OV}	Overvoltage Detection Level	1	8.5	8.9	10.0	V	1)

¹⁾ If the supply voltage drops below $V_{SUP,UV}$ or rises above $V_{SUP,OV}$, the output voltage is switched to V_{SUP} (≥97% of V_{SUP} at R_L = 10 kΩ to GND).

Note: The over- and undervoltage detection is activated only after locking the sensor!

The CLAMP-LOW register has to be set to a voltage ≥ 200 mV.

5. Application Notes

5.1. Application Circuit

For EMC protection, it is recommended to connect one ceramic 100 nF capacitor each between ground and the supply voltage, respectively the output voltage pin. In addition, the input of the controller unit should be pulled-down with a 10 k Ω resistor and a ceramic 100 nF capacitor.

Please note that during programming, the sensor will be supplied repeatedly with the programming voltage of 12.5 V for 100 ms. All components connected to the V_{SUP} line at this time must be able to resist this voltage.

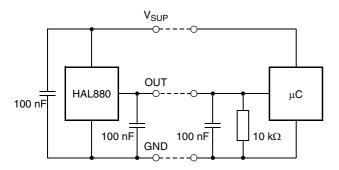


Fig. 5-1: Recommended application circuit

5.2. Use of two HAL880 in Parallel

Two different HAL880 sensors which are operated in parallel to the same supply and ground line can be programmed individually. In order to select the IC which should be programmed, both Hall ICs are inactivated by the "Deactivate" command on the common supply line. Then, the appropriate IC is activated by an "Activate" pulse on its output. Only the activated sensor will react to all following read, write, and program commands. If the second IC has to be programmed, the "Deactivate" command is sent again and the second IC can be selected.

Note: The multi-programming of two sensors works only if the outputs of the two sensors are pulled to GND with a 10 k Ω pull-down resistor.

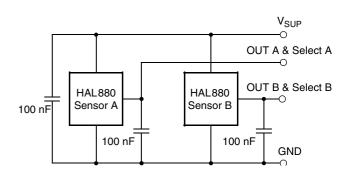


Fig. 5–2: Parallel operation of two HAL880

5.3. Temperature Compensation

The relationship between the temperature coefficient of the magnet and the corresponding TC, TCSQ, and TC-Range codes for linear compensation is given in the following table. In addition to the linear change of the magnetic field with temperature, the curvature can be adjusted as well. For this purpose, other TC, TCSQ, and TC-Range combinations are required which are not shown in the table. Please contact Micronas for more detailed information on this higher order temperature compensation.

Temperature Coefficient of Magnet (ppm/K)	TC-Range	тс	TCSQ
1075	3	31	7
1000	3	28	1
900	3	24	0
750	3	16	2
675	3	12	2
575	3	8	2
450	3	4	2
400	1	31	0
250	1	24	1
150	1	20	1
50	1	16	2
0	1	15	1
-100	1	12	0
-200	1	8	1
-300	1	4	4
-400	1	0	7
-500	1	0	0
-600	2	31	2
-700	2	28	1
-800	2	24	3
-900	2	20	6
-1000	2	16	7
-1100	2	16	2
-1200	2	12	5
-1300	2	12	0

Temperature Coefficient of Magnet (ppm/K)	TC-Range	TC	TCSQ
-1400	2	8	3
-1500	2	4	7
-1600	2	4	1
-1700	2	0	6
-1800	0	31	6
-1900	0	28	7
-2000	0	28	2
-2100	0	24	6
-2200	0	24	1
-2400	0	20	0
-2500	0	16	5
-2600	0	14	5
-2800	0	12	1
-2900	0	8	6
-3000	0	8	3
-3100	0	4	7
-3300	0	4	1
-3500	0	0	4

Note: The table above shows only some approximate values. Micronas recommends to use the TC-Calc software to find optimal settings for temperature coefficients. Please contact Micronas for more detailed information.

5.4. Ambient Temperature

Due to the internal power dissipation, the temperature on the silicon chip (junction temperature T_J) is higher than the temperature outside the package (ambient temperature T_A).

$$T_J = T_A + \Delta T$$

At static conditions and continuous operation, the following equation applies:

$$\Delta T = I_{DD} \times V_{SUP} \times R_{thJ}$$

For typical values use the typical parameters. For worst case calculation, use the max. parameters for I_{DD} and $R_{th},$ and the max. value for v_{SUP} from the application.

For v_{SUP} = 5.5 V, R_{th} = 235 K/W, and I_{DD} = 10 mA, the temperature difference ΔT = 12.93 K.

For all sensors, the junction temperature T_J is specified. The maximum ambient temperature T_{Amax} can be calculated as:

$$T_{Amax} = T_{Lmax} - \Delta T$$

5.5. EMC and ESD

The HAL880 is designed for a stabilized 5 V supply. Interferences and disturbances conducted along the 12 V on-board system (product standard ISO 7637 part 1) are not relevant for these applications.

For applications with disturbances by capacitive or inductive coupling on the supply line, or by radiated disturbances, the application circuit shown in Fig. 5–1 on page 25 is recommended. Applications with this arrangement should pass the EMC tests according to the product standards ISO 7637 part 3 (electrical transient transmission by capacitive or inductive coupling).

Please contact Micronas for the detailed investigation reports with the EMC and ESD results.

6. Programming of the Sensor

6.1. Definition of Programming Pulses

The sensor is addressed by modulating a serial telegram on the supply voltage. The sensor answers with a serial telegram on the output pin.

The bits in the serial telegram have a different bit time for the V_{SUP} -line and the output. The bit time for the V_{SUP} -line is defined through the length of the Sync Bit at the beginning of each telegram. The bit time for the output is defined through the Acknowledge Bit.

A logical "0" is coded as no voltage change within the bit time. A logical "1" is coded as a voltage change between 50% and 80% of the bit time. After each bit, a voltage change occurs.

6.2. Definition of the Telegram

Each telegram starts with the Sync Bit (logical 0), 3 bits for the Command (COM), the Command Parity Bit (CP), 4 bits for the Address (ADR), and the Address Parity Bit (AP).

There are 4 kinds of telegrams:

Write a register (see Fig. 6–2 on page 29)
 After the AP Bit follow 14 Data Bits (DAT) and the Data Parity Bit (DP). If the telegram is valid and the command has been processed, the sensor answers with an Acknowledge Bit (logical 0) on the output.

- Read a register (see Fig. 6–3 on page 30)
 After evaluating this command, the sensor answers with the Acknowledge Bit, 14 Data Bits, and the Data Parity Bit on the output.
- Programming the EEPROM cells (see Fig. 6–4 on page 30)
 After evaluating this command, the sensor answers with the Acknowledge Bit. After the delay time t_w, the supply voltage rises up to the programming voltage.
- Activate a sensor (see Fig. 6–5 on page 30) If more than one sensor is connected to the supply line, selection can be done by first deactivating all sensors. The output of all sensors will be pulled to ground by the internal 10 kΩ resistors. With an Activate pulse on the appropriate output pin, an individual sensor can be selected. All following commands will only be accepted from the activated sensor.

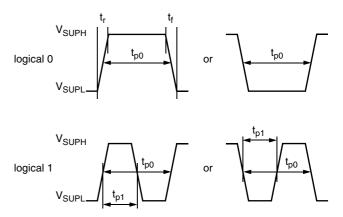


Fig. 6-1: Definition of logical 0 and 1 bit

Table 6–1: Telegram parameters

Symbol	Parameter	Pin	Min.	Тур.	Max.	Unit	Remarks	
V _{SUPL}	Supply Voltage for Low Level during Programming	1	5	5.6	6	V		
V _{SUPH}	Supply Voltage for High Level during Programming	1	6.8	8.0	8.5	V		
t _r	Rise Time	1	_	-	0.05	ms		
t _f	Fall Time	1	-	-	0.05	ms		
t _{p0}	Bit Time on V _{SUP}	1	1.7	1.8	1.9	ms	t _{p0} is defined through the Sync Bit	
t _{pOUT}	Bit Time on Output Pin	3 or 4	2	3	4	ms	t _{pOUT} is defined through the Acknowledge Bit	
t _{p1}	Voltage Change for Logical 1	1, 3 or 4	50	65	80	%	% of t_{p0} or t_{pOUT}	
V _{SUPPROG}	Supply Voltage for Programming the EEPROM	1	12.4	12.5	12.6	V		
t _{PROG}	Programming Time for EEPROM	1	95	100	105	ms		
t _{rp}	Rise Time of Programming Voltage	1	0.2	0.5	1	ms		
t _{fp}	Fall Time of Programming Voltage	1	0	-	1	ms		
t _w	Delay Time of Programming Voltage after Acknowledge	1	0.5	0.7	1	ms		
V _{act}	Voltage for an Activate Pulse	3 or 4	3	4	5	٧		
t _{act}	Duration of an Activate Pulse	3 or 4	0.05	0.1	0.2	ms		
V _{out,deact}	Output Voltage after Deactivate Command	3 or 4	0	0.1	0.2	V		

WRITE

 


Fig. 6–2: Telegram for coding a Write command

READ

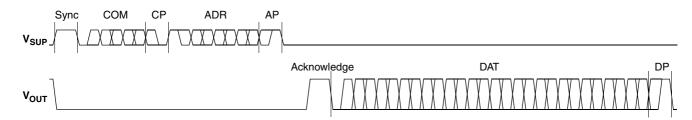


Fig. 6–3: Telegram for coding a Read command

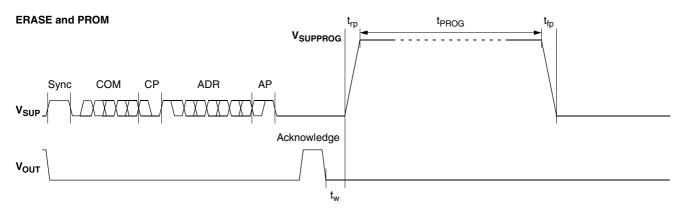


Fig. 6-4: Telegram for coding the EEPROM programming

 


Fig. 6-5: Activate pulse

6.3. Telegram Codes

Sync Bit

Each telegram starts with the Sync Bit. This logical "0" pulse defines the exact timing for t_{p0} .

Command Bits (COM)

The Command code contains 3 bits and is a binary number. Table 6–2 shows the available commands and the corresponding codes for HAL880.

Command Parity Bit (CP)

This parity bit is "1", if the number of zeros within the 3 Command Bits is uneven. The parity bit is "0", if the number of zeros is even.

Address Bits (ADR)

The Address code contains 4 bits and is a binary number. Table 6–3 on page 33 shows the available addresses for the HAL880 registers.

Address Parity Bit (AP)

This parity bit is "1", if the number of zeros within the 4 Address bits is uneven. The parity bit is "0", if the number of zeros is even.

Table 6-2: Available commands

Command	Code	Explanation
READ	2	read a register
WRITE	3	write a register
PROM	4	program all nonvolatile registers (except the lock bits)
ERASE	5	erase all nonvolatile registers (except the lock bits)

Data Bits (DAT)

The 14 Data Bits contain the register information.

The registers use different number formats for the Data Bits. These formats are explained in Section 6.4. on page 32

In the Write command, the last bits are valid. If, for example, the TC register (10 bits) is written, only the last 10 bits are valid.

In the Read command, the first bits are valid. If, for example, the TC register (10 bits) is read, only the first 10 bits are valid.

Data Parity Bit (DP)

This parity bit is "1", if the number of zeros within the binary number is even. The parity bit is "0", if the number of zeros is uneven.

Acknowledge

After each telegram, the output answers with the Acknowledge signal. This logical "0" pulse defines the exact timing for t_{nOLIT} .

6.4. Number Formats

Binary number:

The most significant bit is given as first, the least significant bit as last digit.

Example: 101001 represents 41 decimal.

Signed binary number:

The first digit represents the sign of the following binary number (1 for negative, 0 for positive sign).

Example: 0101001 represents +41 decimal

1101001 represents -41 decimal

Two's complementary number:

The first digit of positive numbers is "0", the rest of the number is a binary number. Negative numbers start with "1". In order to calculate the absolute value of the number, calculate the complement of the remaining digits and add "1".

Example: 0101001 represents +41 decimal

1010111 represents -41 decimal

6.5. Register Information

CLAMP-LOW

- The register range is from 0 up to 255.
- The register value is calculated by:

$$CLAMP\text{-}LOW = \frac{LowClampingVoltage \times 2}{V_{SUP}} \times 255$$

CLAMP-HIGH

- The register range is from 0 up to 511.
- The register value is calculated by:

$$CLAMP ext{-}HIGH = \frac{HighClampingVoltage}{V_{SUP}} \times 511$$

VOQ

- The register range is from -1024 up to 1023.
- The register value is calculated by:

$$VOQ = \frac{V_{OQ}}{V_{SUP}} \times 1024$$

SENSITIVITY

- The register range is from -8192 up to 8191.
- The register value is calculated by:

$$SENSITIVITY = Sensitivity \times 2048$$

TC

- The TC register range is from 0 up to 1023.
- The register value is calculated by:

$$TC = GROUP \times 256 + TCValue \times 8 + TCSQValue$$

MODE

 The register range is from 0 up to 255 and contains the settings for FILTER and RANGE:

 $MODE = OUTPUTMODE \times 32 + BITRATE \times 16 + FILTER \times 8 + RANGE \times 2 + EnableProgGPRegisters$

D/A-READOUT

- This register is read only.
- The register range is from 0 up to 16383.

DEACTIVATE

- This register can only be written.
- The register has to be written with 2063 decimal (80F hexadecimal) for the deactivation.
- The sensor can be reset with an Activate pulse on the output pin or by switching off and on the supply voltage.

HAL880

Table 6-3: Available register addresses

Register	Code	Data Bits	Format	Customer	Remark
CLAMP-LOW	1	8	binary	read/write/program	Low-clamping voltage
CLAMP-HIGH	2	9	binary	read/write/program	High-clamping voltage
VOQ	3	11	two's compl. binary	read/write/program	Output quiescent voltage
SENSITIVITY	4	14	signed binary	read/write/program	
MODE	5	8	binary	read/write/program	Range, filter, output mode, interface bit time settings
LOCKR	6	2	binary	read/write/program	Lock Bit
GP REGISTERS 13	8	13	binary	read/write/program	1)
D/A-READOUT	9	14	binary	read	Bit sequence is reversed during read sequence.
ТС	11	10	binary	read/write/program	bit 0 to 2 TCSQ bit 3 to 7 TC bit 7 to 9 TC-RANGE
GP REGISTER 0	12	13	binary	read/write/program	1)
DEACTIVATE	15	12	binary	write	Deactivate the sensor

¹⁾ To read/write this register it is mandatory to read/write all GP register one after the other starting with GP0. In case of writing the registers it necessary to first write all registers followed by one store sequence at the end. Even if only GP0 should be changed all other GP registers must first be read and the read out data must be written again to these registers.

Table 6-4: Data formats

	Char	DAT3				DAT2				DAT1				DAT0			
Register	Bit	15	14	13	12	11	10	09	80	07	06	05	04	03	02	01	00
CLAMP LOW	Write	_	_	-	-	_	-	-	-	V	V	V	V	V	V	V	V
	Read	_	_	V	V	V	V	V	V	V	V	-	-	-	-	-	-
CLAMP HIGH	Write	_	_	-	-	-	-	-	V	V	V	V	V	V	V	V	V
	Read	_	_	V	V	V	V	V	V	V	V	V	-	-	-	-	-
VOQ	Write	_	_	-	-	-	V	V	V	V	V	V	V	V	V	V	V
	Read	_	_	V	V	V	V	V	V	V	V	V	V	V	-	-	-
SENSITIVITY	Write	_	_	V	V	V	V	V	V	V	V	V	V	V	V	V	V
	Read	_	_	V	V	V	V	V	V	V	V	V	V	V	V	V	V
MODE	Write	_	_	-	-	-	-	-	-	V	V	V	V	V	V	V	V
	Read	_	_	V	V	V	V	V	V	V	V	-	-	-	-	-	-
LOCKR	Write Read	_ _	_ _	- V	- V	_ _	_ _	_ _	_	_ _	_ _	_ _	_ _	_ _	_ _	V -	V -
GP 13	Write	_	_	-	V	V	V	V	V	V	V	V	V	V	V	V	V
Registers	Read	_	_	V	V	V	V	V	V	V	V	V	V	V	V	V	-
D/A- READOUT	Read	-	-	V	V	٧	V	V	V	V	V	V	V	V	V	٧	V
TC	Write	_	_	_	_	_	_	V	V	V	V	V	V	V	V	V	V
	Read	_	_	V	V	V	V	V	V	V	V	V	V	-	-	-	-
GP 0	Write	_	_	_	V	V	V	V	V	V	V	V	V	V	V	V	V
Register	Read	_	_	V	V	V	V	V	V	V	V	V	V	V	V	V	-
DEACTIVATE	Write	-	-	-	-	1	0	0	0	0	0	0	0	1	1	1	1
V: valid, -: igno	re, bit or	der: M	SB firs	t	1	ı	1				1				1	1	

6.6. Programming Information

If the content of any register (except the lock registers) is to be changed, the desired value must first be written into the corresponding RAM register. Before reading out the RAM register again, the register value must be permanently stored in the EEPROM.

Permanently storing a value in the EEPROM is done by first sending an ERASE command followed by sending a PROM command. The address within the ERASE and PROM commands must be zero. ERASE and PROM act on all registers in parallel.

Note: To store data in the GP register, it is necessary to set bit number 0 of the MODE register to "1", before sending an ERASE and PROM command. Otherwise the data stored in the GP register will not be changed.

All four registers must be written before applying

All four registers must be written before applying the store sequence.

If all HAL880 registers are to be changed, all writing commands can be sent one after the other, followed by sending one ERASE and PROM command at the end.

During all communication sequences, the customer has to check if the communication with the sensor was successful. This means that the acknowledge and the parity bits sent by the sensor have to be checked by the customer. If the Micronas programmer board is used, the customer has to check the error flags sent from the programmer board.

Note: For production and qualification tests, it is mandatory to set the LOCK bit after final adjustment and programming of HAL880. The LOCK function is active after the next power-up of the sensor. The success of the lock process should be checked by reading at least one sensor register after locking and/or by an analog check of the sensors output signal. Electrostatic discharges (ESD) may disturb the programming pulses. Please take precautions against ESD.

7. Data Sheet History

- Advance Information: "HAL880 Programmable Linear Hall-Effect Sensor", Oct. 14, 2008, Al000145_001EN. First release of the advance information.
- 2. Data Sheet: "HAL880 Programmable Linear Hall-Effect Sensor", Feb. 23, 2009, DSH000152_001EN. First release of the data sheet. Minor changes:
 - -small numbering changes (order of chapters).
- Data Sheet: "HAL880 Programmable Linear Hall-Effect Sensor", Sept. 22, 2011, DSH000152_002EN. Second release of the data sheet. Major changes:
 - -SOIC8 SMD package added.
- 4. Data Sheet: "HAL880 Programmable Linear Hall-Effect Sensor", Mar. 6, 2012, DSH000152_003EN. Third release of the data sheet. Major changes:
 - -Section 3. Specifiations
 - -Section 5.5. Register Information
- Data Sheet: "HAL880 Programmable Linear Hall-Effect Sensor", Jan. 14, 2016, DSH000152_004EN. Fourth release of the data sheet. Major Changes:
 - -Package drawings updated
 - -Ammopack drawing updated
 - Assembly and storage information changed